THE BEACH CABANA





INCLUDES

- CABANA CANOPY
 - BASE POLE
 - 4 X SAND PEGS
 - 4 X METAL PEGS
 - PEG BAG
 - CARRY BAG



Ensure that you read and understand this manual, improper assembly or failure to follow instructions may result in property damage and/or personal injury.

SETUP


1. Secure the base pole

Dig a hole around 25cm deep and insert the base pole. Twist the pole into firm sand until the depth sticker is just below ground level. Tightly pack sand around the base pole.



2. Open the canopy

- A. Hold the cabana upside down and check that all legs are separated with no tangles.
- B. If needed, slightly shake the canopy as you push the slider up and raise the cabana.
- C. Ensure the pin is placed through the hole to secure the canopy.

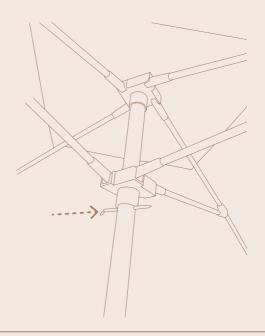

3. Secure the canopy

- A. Place the canopy into the base pole.
- B. Once upright, check that all legs are hanging downward.

 IMPORTANT: All four legs should just touch the ground. If the legs are higher off the ground screw the cabana base pole further into the sand.



4. Fill the sand pockets

Add a few handfuls of sand in leg bag before filling each pocket. Adjust the legs so they are straight. For added security, use the included pegs (hammer not included).

PACK DOWN

1. Empty sand pockets

Keep cabana in the upright base pole and empty all the sand pockets.

2. Collapse the canopy

Stand under the cabana, support the canopy frame and pull the metal pin out to collapse the canopy.



3. Hook the pockets on top

Fold the four sand pockets on the top of the canopy. If you are unable to reach, remove the upper part of the cabana and do this step on the ground.

4. Remove canopy from base pole

Remove the canopy from the base pole. Place the canopy, base pole and accessories into the bag. Twist the canopy fabric around the frame to make it more compact.



WARNINGS

- Always close the cabana in windy conditions or when unattended.
- Product is designed as a shade shelter only.
- Do not overfill sand pockets as this can damage the frame.
- *Always bury the central pole to the specified depth.*
- Keep away from open flames and heat sources.
- Ensure children are supervised at all times when the product is in use

IMPORTANT INFO

- This product is designed as a shade shelter only. Reflections from the sand and
 water can still expose you to harmful UV rays. It is recommended that you
 wear sunscreen, hat and sunglasses when outside.
- Follow all instructions and tips when using this product.
- We are not responsible for the misuse, poor or incorrect set up of products that lead to damage or harm to any persons or property.
- For all warranty information, please visit www.palmclub.com.au/warranty

CARE INSTRUCTIONS

- Always follow the set up instructions for the product.
- Keep the product dry and clean of any salt, sand or chlorine when storing to maintain and extend the product life.
- Ensure the product is kept in the carry bag when not in use.
- If the product gets wet, dry with a soft towel and allow the fringing to drip dry
 in the shade before packing away.
- Reduce unnecessary and excessive exposure to direct sunlight by packing the product away when not in use.
- Maintain the functionality of the product by regularly cleaning and ensuring salt and sand is removed before storage.
- Avoid using chemicals on fabric clean with mild soapy water and dry thoroughly.

LET'S CONNECT



SCAN HERE WWW.PALMCLUB.COM.AU

Designed by: Adventure Trading Australia Pty Ltd 71 Charles Ulm Place, Eagle Farm, QLD 4009

Made in China

